


EJECTOR HEADER CAP

(Locks FFSD cable to EHF header)

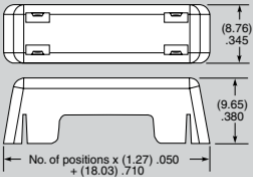

ECF

NO. PINS PER ROW

**05, 08, 10,
13, 17, 20, 25**